

inCarBite's OE factory fit WiFi Dash Camera : ICB-CARCAM-AUDI

Installation Guide



Step 1: Original location before installation



Step 2: Hold the front part of plastic covering behind the rear view mirror by one hand, and use the other hand to grip the end part, detach the end part.



Step 3: Grip both side of front cover with two hands.



Step 4: Take out the front cover by pulling downwards



Step 5: Pull out the main wire of the WiFi Dash Camera unit from the mounting hole.



Step 6: Install the main unit, fit with front cover




Step 7: Connect the extension wire with the main unit wire plug and play, installing the wire via the car's column A to Fuse Box.

Step 8: Open the Fuse Box and choose the right Fuse slot and take out the fuse. Plug the fuse to our adaptor at the end of the wire and then plug the adaptor to the same right Fuse slot. Close the Fuse Box.





Step 9: Fixed the covering in position, check both side cover after the completion of the fitment.

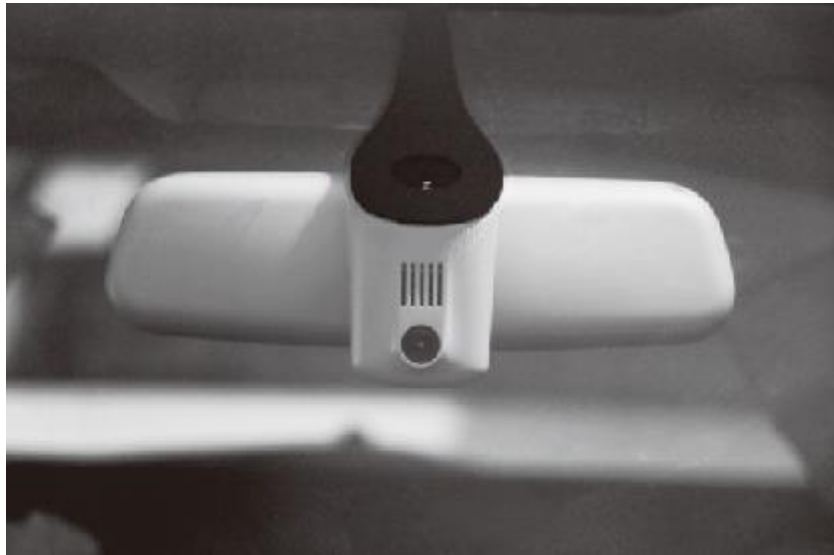

Step 10: Installation completed.